


Trick

Trick skiing does not use a mapped course or collect any timing information.

Recreational Trick Screen

The Recreational Trick screen has the following information.

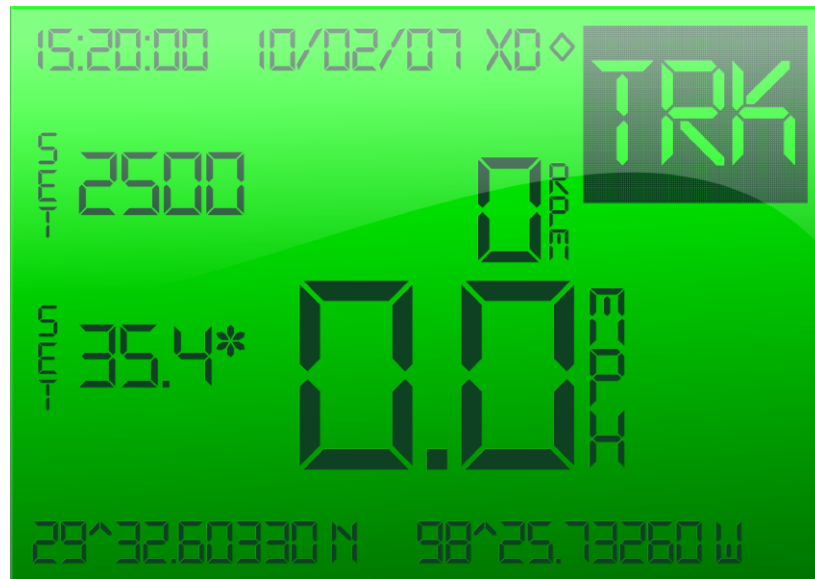

Name	Description
Time and Date	Time format is XX:XX:XX Date format is MM/DD/YY
Number of Satellites	X = Number of satellite fix, (1 through 12). D = Differential, if present.
Page Icon	Selects Recreational, Tournament, and Timing Recap screens. NOTE: Recreational, Tournament, or Timing Recap screens are also available from the Main Menu bar, SCRNR option.
Event Type or Directional Arrow	Selects Jump, Slalom, Trick, and Waypoint events. NOTE: If Event Type is not active, a directional arrow is displayed. The arrow shows the direction the boat is moving. When boat velocity is less than 1 mph (1.6 km/h), the directional arrow freezes.
RPM Set Speed	With the system is in RPM mode, you can select an RPM speed for the boat. NOTE: RPM Set Speed is only available for Recreational skiing.
RPM Actual Speed	RPM speed that the boat is actually going.
Boat Set Speed MPH or KPH	Sets the MPH or KPH boat speed.
Actual Boat Speed	MPH or KPH speed that the boat is actually going.
Pull Type / Skier Selection	Skier pull type (A1-A3, B1-B3, C1-C3) and the name of the currently selected skier. NOTE: If a skier has not been selected, Latitude is displayed.
Course Selection	Name of the currently selected course. NOTE: If a course has not been selected, Longitude is displayed.

Set Event Type to Trick

1. From the Recreational screen, TAP SELECT button to highlight the Event Type.
2. With Event Type highlighted, TAP UP button until you see Trk. Trk is the Event Type for Trick skiing.

Set Boat Speed

1. From the Recreational screen, TAP SELECT button to highlight the Set Speed. The Set Speed is highlighted.



2. To increase the setspeed:

slowly, by increments of 0.1, TAP UP button.
quickly, with larger increments, HOLD UP button

3. To decrease the setspeed:

slowly, by increments of 0.1, TAP DOWN button.
quickly, with larger increments, HOLD DOWN button.

The boat speed is adjusted according to the selected speed.

Set RPM Boat Speed

1. From the Recreational screen, TAP SELECT button to highlight the RPM Set Speed. The RPM Set Speed is highlighted.



2. To increase the RPM speed:


slowly, by increments of 10, TAP UP button.
quickly, with larger increments, HOLD UP button

3. To decrease the setspeed:

slowly, by increments of 10, TAP DOWN button.
quickly, with larger increments, HOLD DOWN button.

The RPM boat speed is adjusted according to the selected speed.

Move to the Next Screen

1. From the Recreational screen, TAP SELECT button to highlight the Page Icon .
2. With Page Icon highlighted, TAP UP button to scroll to the Tournament screen.


Tournament

The Tournament Trick screen has the following formation.



Name	Description
Boat Speed	Displays the actual boat speed.
Icon Target Speed Notification	An asterisk is shown if the set speed chosen is an official tournament speed. NOTE: For slalom and jump events only.
Page Icon	Selects Recreational, Tournament, and Timing Recap screens. NOTE: Recreational, Tournament, or Timing Recap screens are also available from the Main Menu bar, SCRNs option.
Pull Type	Three levels of “pull” the skier feels as the boat adjusts to maintain the set speed while driving the course. Level A1 – A3 = Mild pull felt by the skier. Level B1 – B3 = Moderate pull felt by the skier. Level C1 – C3 = Sharp and aggressive pull felt by the skier. Used by advanced skiers.
Operating Mode / Course	Displays TRICK until a course is detected or selected. Zero Off has automatic course detection that finds the nearest slalom course within 1mile radius of the boat. NOTE: You can manually select another course from Main Menu bar, Map option.
On / Off Button	Turns the cruise control On and Off.

Move to the Next Screen

1. From the Tournament screen, TAP SELECT button to highlight the Page Icon .
2. With Page Icon highlighted, TAP UP button to scroll to the Recreational and Timing Recap screens.

Set Boat Speed

1. From the Tournament screen, TAP SELECT button to highlight the Set SPD. The Set Speed is highlighted.



2. To change the speed,

TAP UP button to increase the speed.

TAP DOWN button to decrease the speed

The boat speed is adjusted according to the selected speed. Note that alternate unit setspeed is displayed below in smaller font.

Select a Skier Pull Type

A Skier Pull Type is the level of “pull” felt by the skier as the boat adjusts to maintain the set speed.

1. From the Tournament Trick screen, TAP SELECT to highlight the Skier Pull Type. The Skier Pull Type is highlighted.



2. TAP UP button to select the Skier Pull Type. The Skier Pull Types are defined as follows:

A1 – A3 = Mild pull felt by the skier.

B1 – B3 = Moderate pull felt by the skier.

C1 – C3 = Sharp and aggressive pull felt by the skier. Used by advanced skiers.

*Please refer to Skier Pull Types for more details.